




INSTRUCTIONS FOR INSTALLATION:

- ◇ **AirVents** fit perfectly on your stock side panel.
- ◇ Hold **AirVents** up to the outside of the stock panel on the sled and mark & drill rivet holes.
- ◇ Remove stock heat shield
- ◇ Use a holesaw bit (1 ½” to 2” recommended) and drill holes in a pattern in the area between the marked rivet holes on your stock panel (see example in photo). It is up to you to determine amount of airflow needed for your particular application. If you choose to cut out the entire panel behind the vent, realize that the strength of your panel may be compromised and the vent may not fit as it was intended. (you can also drill more holes in the heat shield to increase air flow).

- ◇ Use enclosed rivets to attach **AirVents** to your stock panel.
- ◇ Reinstall stock heat shield.
- ◇ Enjoy your “**COOL**” sled!

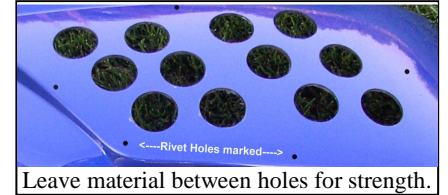

Please contact us with Suggestions or Problems!

Tammy or Alan Schoen
1-208-587-8584 or 1-208-590-1786

schoen311@roadrunner.com
www.2coolairvents.com

NOTE: If you get a puncture or tear in your panel, contact us and we can replace the fabric at a nominal cost as long as the frame is in good shape.